



REF. DESCRIPTION

REF. DESCRIPTION

REF. DESCRIPTION

- 1 Film / Fabric
- 2 Blackout Bottom Rail
- 3 Roll Tube
- 4 Spring Mechanism
- 5 Side Chain Clutch Mech.
- 6 Roll Tube End Pin
- 7 Bottom Rail
- 8 A1. Retaining Strip
- 9 DS Adhesive Tape
- 10 Bottom Rail End Cap
- 11 Pull Cord Holder
- 12 Side Fix Bracket
- 13 Acorn
- 14 Stainless Steel Cleat
- 15 Pull Cord
- 16 Operating Bead Chain

- 17 Chain Connector
- 18 Chain Holder
- 19 Cassette Pin End Plate RH/LH
- 20 Uni Fix Brackets
- 21 Top Fix Brackets
- 22 Cassette
- 23 Brush Strip
- 24 End Plate Screws short/long
- 25 Inner Side Channel
- 26 Outer Side Channel
- 27 Rivet for LITETITE B.O fabric
- 28 PVC Retaining Rod
- 29 Bottom Block
- 30 BOBR Slide
- 31 Bottom Slide Unlock Tabs
- 32 Bottom Slide with Latch

- 33 Connection Strip
- 34 Bottom Rail Handle
- 35 Bottom Moulding
- 36 Curtain Feed
- 37 Stainless Steel Cord Clamp
- 38 Stainless Steel Guide Pulley
- 39 Auto Cordlock Pushbutton
- 40 Cassette Cable Support Kit
- 41 Uni Fix Adaptor Bracket
- 42 Adaptor Clamp
- 43 Adaptor Bolt
- 47 Spring End Plate
- 48 Clutch End Plate

**SPARE PARTS LIST FOR
CASSETTE ROLLER
SCREENS / BLINDS**

