


Installation Instructions

STOPLITE™ BLACKOUT BLIND

We reserve the right to make any modifications necessary to ensure products comply with a customers requirements.
The drawings in this document are for illustration purposes only and are NOT TO SCALE.

IMPORTANT NOTE FOR FITTER:-
PLEASE LEAVE THIS INSTRUCTION SHEET WITH THE
ROLLER BLIND FOR CUSTOMER REFERENCE

(1)

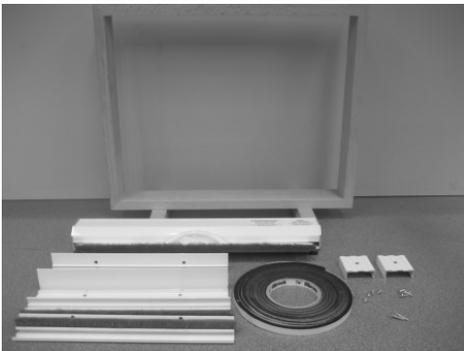

BLIND AND COMPONENTS

Each STOPLITE will be supplied with:

- 2 x Mounting Brackets and 2 x countersunk screws.
- 2 x FRONT side channels and 4 x (3/4" x 6) fixing screws.
- 2 x REAR side channels and 4 x locking screws.
- 2 x Side Channel Feet
- Sufficient EXPANDABLE FOAM.

(2)



BRACKETS

- Measure bracket holes equally in from each side. Bracket holes should be at least 75mm in from each side.
- Using the bracket as a template make sure the brackets holes are marked so the bracket sits flush to the front of the window recess and does not extend beyond the edge and into the room.
- Also ensure there is at least 15mm clearance behind the brackets so the REAR side channels will fit.




(3)



EXPANDABLE FOAM

- The expandable foam is designed to prevent light ingress between the blind and window recess. Not all recesses are perfectly flat and the foam will expand to fill light gaps around the blind.
- Apply the foam to the sides ensuring that it will be covered by the side channels once they are installed.
- Always cut the foam when coming to a corner and start with a new line of foam at the right angle to ensure no light ingress in the corners of the recess, Also, always cut the foam around the brackets so no light ingress occurs at the very edge of the brackets.
- Depending on the recess it may be necessary to also fit the foam between brackets and recess if the surface does not appear flat.

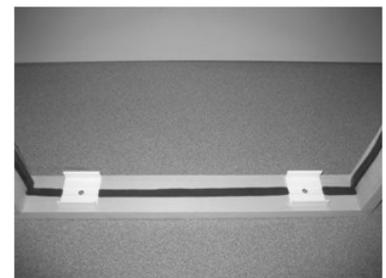


(4)

INSTALLING BLIND AND FITTING FRONT SIDE CHANNELS

- The blind can now be clipped into the mounting brackets as shown in the left-hand photograph.
- The FRONT side channels can now be fitted. Place the top edge in front of the lip at the bottom of the cassette and slide the bottom of the side channel in to place.
- Ensure the *depth* of the side channel is the same distance back at both the top and the bottom as shown in the right-hand photographs.



TOP

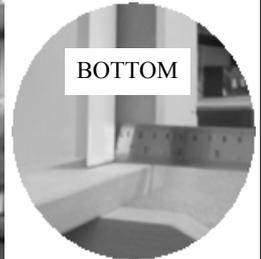


BOTTOM

(5)

FIXING THE FEET, FRONT SIDE CHANNELS AND PREPARING THE REAR SIDE CHANNELS

- Using the screws provided install the FEET and then secure the FRONT side channels in to place using a drill or screwdriver.
- Then before fitting the REAR channels fix a piece of expandable foam to the bottom of each channel as shown in the right-hand photograph.

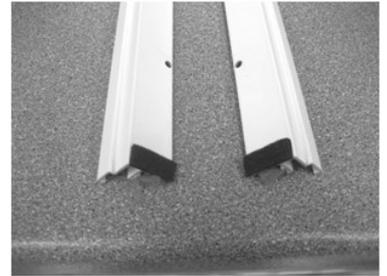

(6)

FITTING REAR SIDE CHANNELS

- Place the REAR side channel into position ensuring the blind locking mechanism slots in to the channel as shown in the left-hand photograph.
- Line up the two holes in the side channel to the small U section you will have noticed that is on the FRONT side channels.
- You can use a ruler to push the brush strip to one side in order to fit the two locking screws in to the FRONT channel U section as shown in the right-hand photograph.



(7)

COMPLETE

- The installation is now complete.
- To operate push the handle on the bottom rail away from you and pull the blind down to the desired position. To lock the blind into position pull the handle towards you.



Care and Maintenance

Under normal circumstances dusting with a **NON-ABRASIVE** dry duster is all that is required. Finger prints, grease and most stubborn marks on the fabric can be carefully removed with white spirit and a soft cloth, followed by a further wiping over with a soft non-abrasive cloth dipped in clean soapy water. If the fabric becomes very dirty it can be carefully wiped over with a soft non-abrasive cloth and clean water with a little soap or detergent. This will do no harm as long as the fabric is allowed to dry completely before the blind is rolled up. Excess water should be removed as it may leave a water mark when dry.